

9. CONTROL MENUS

Factory default settings are shown in bold type.

Menu	Item	Options	Notes (default settings in bold print)
<i>ADDR</i>		<i>1-5 12</i>	DMX address (default address = 1)
<i>PATI</i>		<i>PINV</i>	Pan invert
		<i>TINV</i>	Tilt invert
<i>PSET</i>		<i>MOD 1</i>	DMX mode 1 (normal)
		<i>MOD 2</i>	DMX mode 2 (extended)
<i>MODE</i>	<i>NORM</i>		DMX-controlled operation / slave fixture
	<i>SA-R</i>		Stand-alone auto trig operation / auto trig master fixture
	<i>SA-M</i>		Stand-alone music trig operation / music trig master fixture
<i>INFO</i>	<i>TIME</i>	<i>HRS</i>	<i>TOTL</i> = total hours of operation since manufacture. <i>RSET</i> = resettable counter. Press [Enter] to display hours of operation since counter reset. To reset to zero, press [Up] for 5 seconds.
		<i>L HR</i>	<i>TOTL</i> = total hours of lamp operation. <i>RSET</i> = resettable counter. Press [Enter] to display hours of lamp operation since counter reset. To reset to zero, press [Up] for 5 seconds.
		<i>L ST</i>	SCX600: <i>TOTL</i> = total number of startups (power-ons). SCX700: <i>TOTL</i> = total number of lamp strikes. <i>RSET</i> = resettable counter. Press [Enter] to display number of startups/lamp strikes since counter reset. To reset to zero, press [Up] for 5 seconds.
	<i>VER</i>	<i>X.X.X</i>	CPU software version number

Table 2: Control menu

MAN		RST	Reset fixture	
		L ON	Lamp on	
		L OFF	Lamp off	
	SHUT		OPEN	Open shutter
			CLOS	Close shutter
			STRF	Shutter strobe fast
			STRM	Shutter strobe medium
			STRS	Shutter strobe slow
	DIM	0-255	Dimmer	
	COL		OPEN	Color wheel in open position
			C 1 → C 9	Color wheel positions 1 → 9
			CW F	Clockwise rotation - fast
			CCWF	Counter-clockwise rotation - fast
			CW M	Clockwise rotation - medium
			CCWM	Counter-clockwise rotation - medium
		CW S	Clockwise rotation - slow	
		CCWS	Counter-clockwise rotation - slow	
GOBO	0 → 7 G7RS → G1RS	Gobo selection 0 → 7 Gobo wheel shake gobo 7 → 1		
I/S	0-255	Gobo rotation speed slow → fast		
PAN	0-255	Pan left → right		
TILT	0-255	Tilt up → down		
TSEQ		RUN	Run a general test of all effects	
UTIL (Press [Enter] for 3 secs. to access)	UPLD	SURE	Manually set fixture to software update mode	
	MLEV	LE 1 → LE 16	Music sensitivity level (1 = most sensitive, 7 = default)	

Table 2: Control menu