

## DMX Channels

## 4 channels

## Channel 1 – Programs

0-9	Blackout
10-19	Red
20-29	Green
30-39	Blue
40-49	White
50-59	Amber
60-69	Red + Green
70-79	Red + Blue
80-89	Red + White
90-99	Red + Amber
100-109	Green + Blue
110-119	Green + White
120-129	Green + Amber
130-139	Blue + White
140-149	Blue + Amber
150-159	White + Amber
160-169	Red + Green + Blue
170-179	Red + Green + Blue + White
180-189	Red + Green + Blue + Amber
190-199	Red + Green + Blue + White + Amber
200-229	Auto
230-255	Sound-controlled mode

## Channel 2 – Strobe

0-9	Not functional
10-255	Strobe effect (0-12Hz), from low to high frequency

Channel 3 – Auto Speed  CH1 must be set between 200-229 

0-9	Not functional
10-255	Speed adjustment, from slow to fast

## Channel 4 – Motor rotation

0-9	OFF
10-119	Clockwise rotation, from slow to fast
120-129	Stop
130-255	Counterclockwise rotation, from slow to fast