

## 12p Hex IP instrukcija

MENU	SUB MENU	OPTIONS/VALUES (DEFAULT SHADED)	DESCRIPTION	
<b>Display Menu</b>	Update Wait... ADJ V1.03			
<b>Menu Set ADDR</b>	Set ADDR 001	001-506	DMX Addressing	
<b>Menu User Mode</b>	CH06	6/7/8/13	DMX Channel Modes	
<b>Menu Function</b>	DimCurve Standard	Standard/Stage/TV/Architec/ Theatre/Stage2	Dimmer Curve Setting	
	NODMX Hold	Hold/Blackout/Program	DMX Lost Setting	
	AUTO RUN FQN01	01~99	Auto Run Programs	
	1. STATC CL:R	R/G/B/RG/GB/RB/RGB/BLAC STR 000-255	Static Color Mode	
	Macros 00	00~63	Color Macro Mode	
	LCD.Set	Backlight Key Lock DisFlash	05~60m ON/ON1/OFF ON/OFF	LCD Display Settings
	DFSET OFF	ON/OFF		Default Reset
	TEMP Fahren	Fahren Celsius		Temperature Display Setting
	Settings WhiteBal	Red: 000~255 Blue : 000~255 White: 000~255 Ambei 000~255 UV : 000~255		White Balance Setting
	Fre_hz 900	900/1000/1100/1200/1300/1400/1500/2500/4000/5000/10k /15k /20k /25k		Set LED Refresh Frequency Rate
Gamma 2.0	2.0 / 2.2 / 2.4 / 2.8		Set Gamma Brightness	
<b>Menu Info</b>	Info TimelInfo	TimelInfo Current TimelInfo TotalTim TimelInfo LastClea TimelInfo TimerPIN	Current Running Time (Hours) Total Time (Hours) Last Time The Running Time Was Cleared (Hours) Clear 0 Password: (Password=050) Total Time Clear 0: (Password=060)	
	Info TempInfo	TempInfo XXX	Current Running Temperature	
	Info Model Inf		Model Name	
	Info Software	V1.03	Current Software Version	
	Info ErrorInf	None	Error Information	
<b>Menu Slave</b>	Slave		Slave Setting	
<b>Menu Manual</b>	ManCtrlDimmer 000~255 ManCtrlRed 000~255 ManCtrlGreen 000~255 ManCtrlBlue 000~255 ManCtrlWhite 000~255 ManCtrlAmber 000~255 ManCtrlPurple 000~255 ManCtrlStrobe 000~255		Manual Control	

### Auto Run Mode:

1. Access the main menu, and press the UP or DOWN buttons so that "Menu Function" is highlighted, then press ENTER. Use the UP or DOWN buttons to highlight "AUTO RUN FQN" and press ENTER.
2. Use the UP or DOWN buttons to scroll through the 99 Auto Run programs. Press ENTER to confirm your selection.

### Static Color Mode:

1. Access the main menu, and press the UP or DOWN buttons so that "Menu Function" is highlighted, then press ENTER. Use the UP or DOWN buttons to highlight "1. STATC CL:X" and press ENTER. "X" is the current color that is displayed.
2. Press ENTER to access 1 of 3 internal programs: 6 Color Change Mode, 30 Color Change Mode, or Color Fade Mode. Use the UP and DOWN buttons to scroll through the programs. Press ENTER to make your selection. After making your selection you are able to adjust running speed. Use the UP or DOWN buttons to adjust the running speed, and press ENTER.
3. You are now able to adjust the strobe rate using the UP or DOWN buttons. Press ENTER after you have made your desired adjustment.
4. If you would like to run a static color, press the UP or DOWN buttons until "1. STATC CL" is displayed again and press ENTER. Use the UP or DOWN buttons to scroll through the static colors.
5. Press ENTER again to enter the strobe function. Use the UP and DOWN buttons to adjust the strobe rate. Press ENTER after you have found your desired strobe rate.

### Color Macro Mode:

1. Plug the fixture in and press the MODE button and press the UP or DOWN buttons until "Menu Function" is displayed, and press ENTER.
2. Press the UP or DOWN buttons until "Macros" is displayed and press ENTER.
3. There are 63 colors to choose from. Find your desired color using the UP and DOWN buttons.
4. Once you have found your desired color press ENTER.

### Manual Control - With this function you can manually adjust all colors to make your own desired color.

1. Plug the fixture in and press the MODE button and press the UP or DOWN buttons until "Menu Manual" is displayed, and press ENTER.
2. Press the UP or DOWN buttons to scroll through dimmer, the 6 colors, and strobe. Press ENTER and use the UP and DOWN buttons to make adjustments.
3. Once you have made your desired adjustments, press ENTER.