

## 12px Hex instrukcija

MENU	SUB MENU	OPTIONS/VALUES	DESCRIPTION
<b>Display Menu</b>	V110		
<b>Menu Function</b>	Set ADDR 001	A001-512	DMX Addressing
	Channel Mode	6/7/8/12	DMX Channel Modes
	Dimmer Curve	Standard (dC00) Stage (dC01) TV (dC02) Architec (dC03) Theatre (dC04)	Dimmer Curve Setting
	NODMX Hold	Hold /blc (Blackout)/Soun (Sound Active)	DMX Lost Setting
	Program Mode	P-01~07	Auto Run Programs
	Color Macros	C-00~63	Color Macro Mode
	Dimmer Mode	r : 000~255 g: 000~255 b: 000~255 u: 000~255 A: 000~255 U: 000~255	Dimmer Mode
	Sound Active	So00~30	Sound Active Mode
	Remote Activation	rFon or rFoF	Remote Sensor Activation
Slave	SLAV	Slave Setting	

### **Control Panel Lock:**

The control panel will lock itself after 30 seconds if nothing is pressed. To unlock the control panel, press the MODE button for 3 seconds.

### **RGBWA + UV Dimmer Mode:**

In this mode you can adjust the individual colors to make your desired color.

1. Plug the fixture in and press the MODE button until:
2. When "r.XXX" is displayed you are in Red dimming mode. Use the UP and DOWN buttons to adjust the intensity. After you have finished adjusting the intensity, or if you would like to skip to the next color, press the ENTER button.
3. When "GXXX" is displayed you are in Green dimming mode. Use the UP and DOWN buttons to adjust the intensity.
4. When "bXXX" is displayed you are in Blue dimming mode. Use the UP and DOWN buttons to adjust the intensity.
5. When "uXXX" is displayed you are in White dimming mode. Use the UP and DOWN buttons to adjust the intensity.
6. When "AXXX" is displayed you are in Amber dimming mode. Use the UP and DOWN buttons to adjust intensity.
7. When "UXXX" is displayed you are in UV dimming mode. Use the UP and DOWN buttons to adjust the intensity.

### **Program Mode:**

In this mode you can choose 1 of 7 programs to run. The fade speed and program speed are both adjustable.

1. Plug the fixture in and press the MODE button until "P-XX" is displayed. "XX" is the current program number displayed.
2. Use the UP or DOWN button to find your desired program.
3. Press the ENTER button to adjust the fade speed, "00" being the slowest, "30" the fastest.
4. Press the ENTER button again to adjust the color change speed, "00" being the slowest, "30" the fastest.

### **Sound Active Mode:**

In this mode the 12PX Hex/12PX Hex Pearl will react to sound, and chase through the different colors.

1. Plug the fixture in and press the MODE button until "SoXX" is displayed. "XX" represents the sound sensitivity level. Use the UP and DOWN buttons to adjust the sensitivity. "00" is the lowest sensitivity, "30" is the highest.

### **Static Color Mode:**

1. Plug the fixture in and press the MODE button until "C-XX" is displayed. "XX" is the color number currently displayed.
2. There are 63 colors to choose from. Use the UP and DOWN buttons to find your desired color.