

Jellydome instrukcija

Operating Modes:

Stand-Alone Operation (Sound Active and Auto Program):

Sound Active:

1. Put dipswitch #1 in the "On" position. The unit will react to the low frequencies of music via the microphone.
2. Dipswitch 3 will reverse the rotation.

Auto Program:

1. To run the Auto Program, put dipswitches 1 & 2 in the "On" position.
Dipswitch 3 will reverse the rotation.
Dipswitches 4, 5, & 6 will control the speed of rotation.
2. The optional *UC3 Controller* (not included) may be used to control different functions including blackout. See the next page for UC3 controls.