

Your device runs in **DMX mode** if '10' is switched off:



The DMX mode only works when a DMX controller is connected to the laser.

Channel	Value	Function
Mode selection		
1	0 - 62	black out
	62 - 129	sound mode
	130 - 189	automatic mode
	190 - 255	DMX mode
Pattern selection		
2	0 - 255	pattern selection
Circular Movement		
3	0 - 161	manual positioning clockwise movement
	162 - 243	auto clockwise movement increasing speed
	244 - 255	clockwise movement slow motion
Y Rotation		
4	0 - 160	manual positioning
	161 - 243	auto movement increasing speed
	244 - 255	auto movement in slow motion
X Rotation		
5	0 - 160	manual positioning
	161 - 243	auto movement increasing speed
	244 - 255	auto movement slow motion
Horizontal movement		
6	0 - 160	manual positioning
	161 - 243	left to right movement with increasing speed
	244 - 255	left to right movement slow motion
Vertical movement		
7	0 - 128	manual positioning
	129 - 193	top down movement with increasing speed
	194 - 255	top down left movement slow motion
Manual Zoom		
8	0 - 80	manual positioning
	81 - 161	auto zoom out increasing speed
	162 - 243	zoom in increasing speed
	244 - 255	zoom in slow motion
Pattern Buildup		
9	0-255	increasing speed
Dot Effect with Strobe		
10	0 - 255	increasing strobe movement
Color Seletion		
	0 - 30	multicolor effect
	31 - 62	white
	63 - 94	red
	95 - 126	yellow
	127 - 156	green
	157 - 190	cyan
	191 - 219	blue
	220 - 254	purple
11	255	auto color change

Please note that not each pattern can be combined with each effect!