


8.MENU OPERATIONS

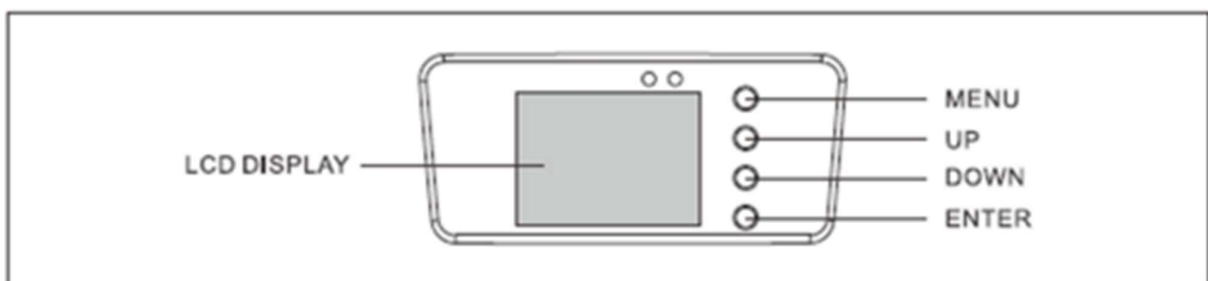

		MENU	Description
Function Mode	Dmx Address	A001~AXXX	DMX address setting
	Channel Mode	CH22	22Channel mode
		CH16	16Channel mode
		CH38	38Channel mode
Auto Run	Internal Program1~8	Master/Alone	Auto run
Music Control	Internal Program1~8	Master/Alone	Sound Control
Option	Reset Default	Yes/No	Reset Default
	Signal Set	Wire DMX	Wire DMX
		Wireless DMX	Wireless DMX
		Act WDMX & Out	Act WDMX & Out
		Reverse Pan (On/Off)	Reverse Pan
	Pan / Tilt	Reverse Tilt (On/Off)	Reverse Tilt
		Select Pan 630°/540°/360°	Pan Degree, default is 540°
		Select Tilt 270°/180°/90°	Tilt Degree, default is 270°
UI SET	Mic SEN 0~99%	Sensitivity Setting	
	OFF Signal Mode (On/Off)	OFF at original status and ON at reset status when no DMX signal	
Information	Temperature	XXX°C/°F	Current Temperature
	Software Version	V1.0~V9.9	Software Version
Manual Control	Reset	Total Reset	Total Reset
		Pan/Tilt Reset	Pan/Tilt Reset
		Zoom Reset	ZoomReset
Channel	PAN=XXX.....	Manual Control Channel	
Advanced (Access Code 088)	Calibration	PAN=XXX.....	Calibration (Code:088)