


8.MENU OPERATIONS

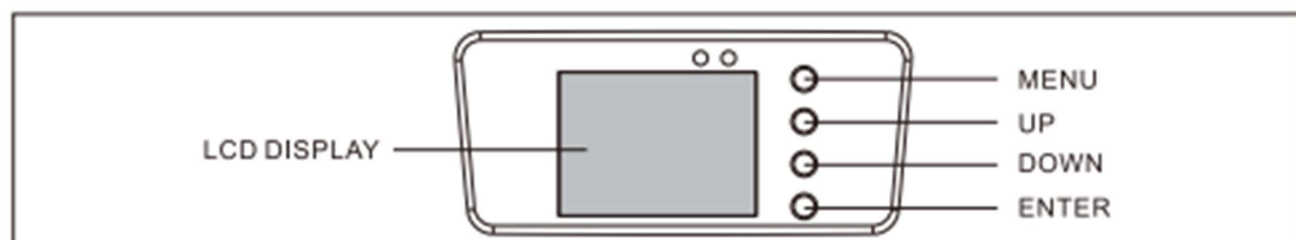

MENU		Description	
Function Mode	Dmx Address	A001~AXXX	DMX Address Setting
	Channel Mode	CH17	17 Channel Mode
		CH15	15 Channel Mode
		CH19	19 Channel Mode
	Auto Run	Internal Program1~9	Auto Run
		State: Master/Alone	
		Auto Run (On/Off)	
	Music Control	Internal Program1~9	Sound Control
		State: Master/Alone	
		Music Run (On/Off)	
Option	Reset Default	Yes/No	Reset Default
	Signal Set	Wire DMX	Wire DMX
		Wireless DMX	Wireless DMX
		Act WDMX&Out	Act WDMX&Out
Pan / Tilt	Reverse Pan (On/Off)	Reverse Pan	
	Reverse Tilt (On/Off)	Reverse Tilt	
UI SET	Select Pan 630/540/360	Select Pan	
	Select Tilt 270/180/90	Select Tilt	
	Mic sensitivity 0~99%	Mic sensitivity	
Information	Temperature	XXX°C/°F	Current Temperature
	Software Version	V1.0~V9.9	Software version
Manual Control	Reset	Total Reset	Total Reset
		Pan/Tilt Reset	Pan/Tilt Reset
Color Reset		Color Reset	
Gobo Reset		Gobo Reset	
The Others Reset		The Others Reset	
Channel	PAN=XXX.....	Manual Channel Control	
ADVANCED (Access Code 088)	Calibration	PAN=XXX.....	Calibration

Special button instruction: press "UP" and "DOWN" for 3 seconds, display menu turns upside down