


3 Board Instruction

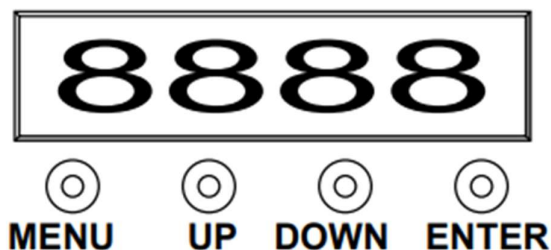

1~Press MENU Can circulate 8 different functions. The front 2Digits mean the function it has. (Please see the function form as follow.) And the last 2Digits mean the function's address, speed or parameter. Press UP or DOWN can change the value. And press ENTER to confirm.

2~Press MENU more than 2sec. The 2Digit number will flash. Then press UP or DOWN can change the value quickly. Then press the ENTER to save the value you want. If you don't want to save the value, press MENU more than 2sec. is okay.

Operate Menu

NO.	Display	Function
1	A001	DMX 512 Address (001—512)
2	28ch/10ch/100h/90h	Channel mode selection
3	CC50	Color jump change (01—99)
4	Ed50	Color gradual, pulse change (01—99)
5	Er50	Color Running effect 1 (01—99)
6	Po50	Color Running effect 2 (01—99)
7	Tr00	Running effect selection (00—21)
8	tU50	Running effect speed control (00—99)
9	BE99	Sound (00—99)
10	R200	Red (000—255)
11	G200	Green (000—255)
12	B200	Blue (000—255)
13	W200	White (000—255)
14	Y200	Amber (000—255)
15	ID01	Light ID setting (01—14) can make several lights chase effect