

| Channel | Function | From | To | Feature |
|---------|---------------------|------|------|---|
| 1 | Dimmer | 0 | 255 | Brightness 1—100% |
| 2 | Strobe | 0 | 3 | Power OFF |
| | | 4 | 7 | Power ON |
| | | 8 | 76 | Synchronizing strobe; Strobe from slow to fast |
| | | 77 | 145 | Pulse strobe ; Strobe from slow to fast |
| | | 146 | 215 | Random strobe ; strobe from slow to fast |
| | | 216 | 255 | Power ON |
| 3 | Warm White | 0 | 255 | 0-100% |
| 4 | Red | 0 | 255 | 0-100% |
| 5 | Green | 0 | 255 | 0-100% |
| 6 | Blue | 0 | 255 | 0-100% |
| 7 | Built-in Program | 0 | 15 | No function |
| | | 16 | 31 | Program 1 |
| | | 32 | 47 | Program 2 |
| | | --- | ---- | ----- |
| | | 224 | 239 | Program14 |
| | | 240 | 255 | Program15 |
| 8 | Program color | 0 | 15 | No function |
| | | 16 | 255 | Color of built-in program |
| 9 | Program speed | 0 | 255 | Speed of Built-in program from slow to fast |
| 10 | Sound | 0 | 15 | No function |
| | | 16 | 255 | Sensitivity increases gradually |