

Menu Screen

You can easily navigate through menu's options with the four buttons under the screen. Navigating in the menu is simple! With the Up / Down buttons, you are moving through menu's choices, pressing Enter, you are entering the sub menu of the option you have chosen, with the Up / Down buttons you're moving through the sub menu's options, with Enter, you are confirming your choice. The **PAR COB 200W LED TW** offers the following options:

A001: Set the DMX address for the 4-channel control mode.

b2CH: Select the channel mode. Press Enter and the Down / Up buttons for choosing between the 6 modes (***b2CH, A2CH, b4CH, A4CH, b6CH, A6CH***). **CC01:** Color chase with adjustable speed.

CP01: Color fade with adjustable speed. **DEoo:**

Color pulse with adjustable speed. **y000:**

Dimmer for Warm Led (From 0 to 255). **o000:**

Dimmer for Cold Led (From 0 to 255).