

5. System Settings

- 01) Press the **MODE** button until the display shows **595**.
- 02) Press the **ENTER** button to enter the menu.
- 03) There are 3 options available. Press the UP and DOWN buttons to toggle between them:

LEd5 Power saving mode

rESEt System Reset

tESEt Test Mode

If the display shows **LEd5**, press the **ENTER** button to enter the menu.

- 04) Press UP and DOWN buttons to choose between **on** ^{Up/Down} **off**.
- 05) If the device is set to ON, it is operating in the power saving mode. If the device is set to OFF, the power saving mode is inactive.

If the display shows **rESEt**, press the **ENTER** button to enter the menu.

- 06) **U 100** will appear shortly on the display.
- 07) When it disappears, the device will return to the previously active mode and the settings will be reset to the factory values.

If the display shows **tESEt**, press the **ENTER** button to enter the menu.

- 08) It is now possible to test if all the features available on the device work properly.
- 09) It is possible to use the included remote control (page 11, Remote Control).

DMX Channels

2 channels

Channel 1 – Built-in programs

0-9	Off
10-26	AUT0
27-43	AUT1
44-60	AUT2
61-77	AUT3
78-94	AUT4
95-111	AUT5
112-127	AUT6
128-145	SOU0
146-163	SOU1
164-181	SOU2
182-199	SOU3
200-217	SOU4
218-235	SOU5
236-255	SOU6

Channel 2 – Speed (Ch 1 must be set between 10-127)

0-255	Speed control, from slow to fast
-------	----------------------------------

11 channels

Channel 1 – Color, Lens A

0-24	Laser off
25-49	Red
50-74	Green
75-99	Blue
100-124	Red + Green
125-149	Red + Blue
150-174	Green + Blue
175-199	Red + Green + Blue
200-224	Color switch
225-255	Color flow

Channel 2 –Strobe Effect, Lens A

0-9	Off
10-254	Strobe speed, from slow to fast (Ch1 must be set between 25-199 ⚠) Color change speed, from slow to fast (Ch1 must be set between 200-255 ⚠)
255	Sound control

Channel 3 – Rotation effect, Lens A

0-4	Off
5-127	Clockwise rotation, from slow to fast
128-133	Stop
134-255	Counterclockwise rotation, from slow to fast

Channel 4 – Color, Lens B

0-24	Off
25-49	Blue
50-74	Amber
75-99	White
100-124	Blue + Amber
125-149	Blue + White
150-174	Amber + White
175-199	Blue + White + Amber
200-224	Color switch
225-255	Color flow

Channel 5 –Strobe Effect, Lens B

0-9	Off
10-254	Strobe speed, from slow to fast (Ch1 must be set between 25-199 ⚠) Color change speed, from slow to fast (Ch1 must be set between 200-255 ⚠)
255	Sound control

Channel 6 – Rotation effect, Lens B

0-4	Off
5-127	Clockwise rotation, from slow to fast
128-133	Stop
134-255	Counterclockwise rotation, from slow to fast