 
 


3.2 MENU

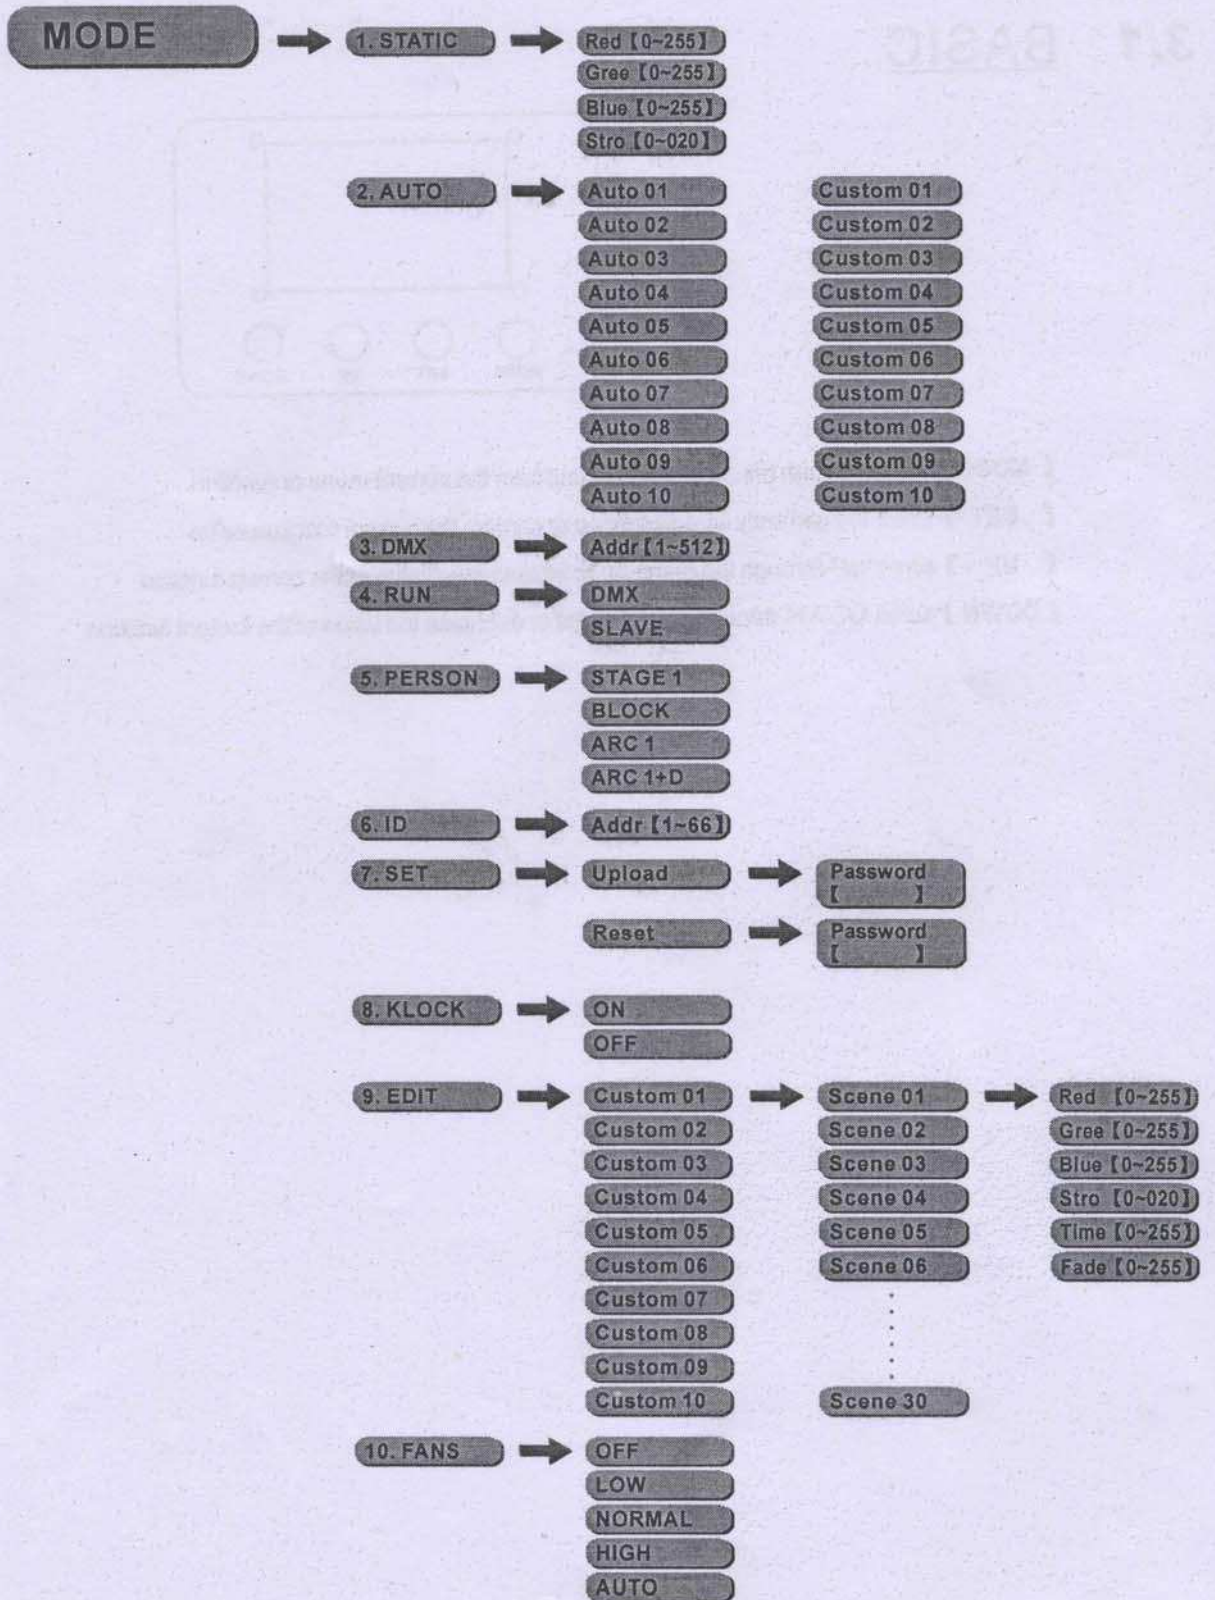

 
3.3 STATIC COLOR

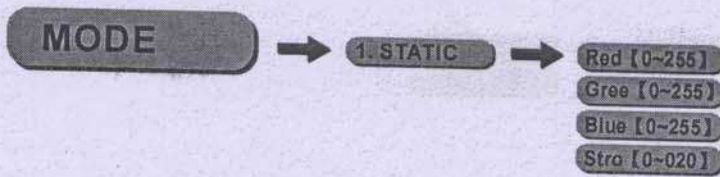

[STATIC]

- Select **[Red]** / **[Gree]** / **[Blue]** / **[Stro]** and set the value by pressing **[UP]** and **[DOWN]**
- Press **[SET]** to save and back to the upper menu
- The fixture will be automatic in Master running mode under this function

3.4 AUTO

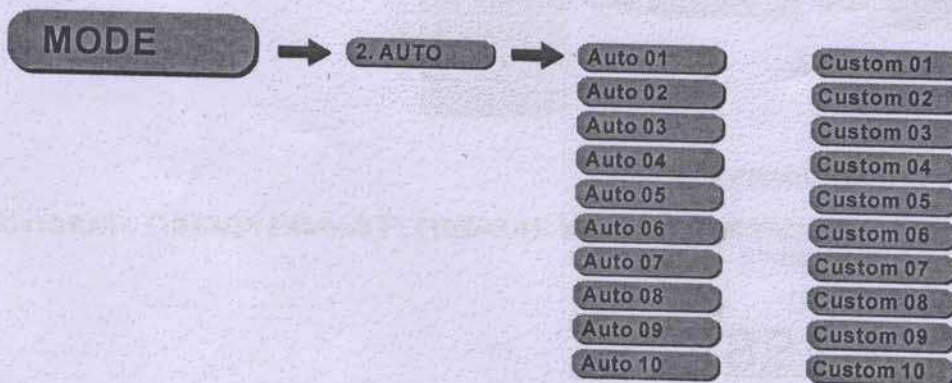

[AUTO]

- Select the target **[AUTO]** program and press **[SET]**
- Programs **[Auto 01]** to **[Auto 10]** are fully pre-programmed and will not be altered
- Programs **[Custom 01]** to **[Custom 10]** are fully pre-programmed and can be edited in **[EDIT]** mode
- The fixture will be automatic in Master running mode under this function

3.5 DMX ADDRESSING



[DMX]

- Enter **[DMX]** and set the DMX address **[1-512]**
- Press **[SET]** save the setting.

3.6 RUN MODE

 


【RUN】

- Enter the **【MODE】** mode to set working mode.
- **【DMX】** mode is for using the DMX512 controller to control the fixtures.
- **【SLAVE】** mode is for Master -- Slave operation, or controlled fixture by Pix-controller.

Note: When fixtures are under Auto program operation, the **【MODE】** no works.

3.7 PERSONALITY

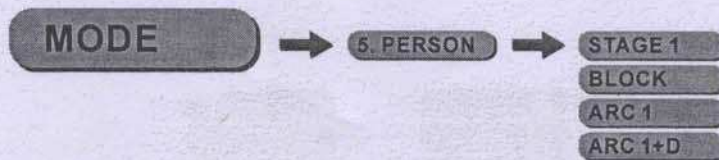

【PERSONALITY】

- Enter **【PERSON】** and select **【STAGE1】** / **【BLOCK】** / **【ARC1】** / **【ARC1+D】** DMX mode

 
3.8 ID ADDRESS



【ID address】

- Enter **【ID】** and set the ID address **【1~066】**

3.9 SETTINGS

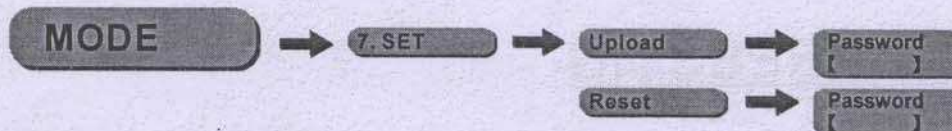


【Upload】

- Select **【Upload】** to upload the custom programs from the current MASTER unit to the SLAVE units.
- In order to activate the upload function the password must be entered
- Password is the same as the main access password
- When uploading the MASTER and SLAVE units will display YELLOW
- If an error occurs when uploading the MASTER and/or SLAVE units will display RED
- On successful uploading of the custom programs the MASTER and SLAVE units will display GREEN.

【Reset】

- This function will reset all setting to the original factory setting

 
3.10 PASSWORD



[Password]

- Enter the **[KLOCK]** mode to set password ON/OFF
- When password is activated, display will demand password each time the fixture is powered on.
- The factory default password is **[UP] > [DOWN] > [UP] > [DOWN]**

 3.11 EDIT

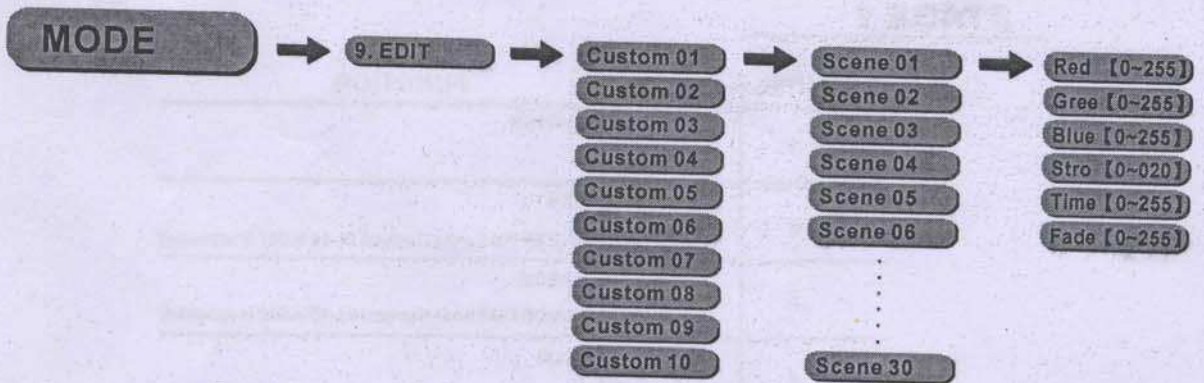

[EDIT]

- Enter **[EDIT]** to edit the custom programs **[Custom 1]** to **[Custom 10]**
- Each program has 100 steps to edit
- Each step allows a creation of a scene using Red, Green, Blue, Strobe, Step time, Fade time

3.12 FAN SETTING



[FANS]

- Enter **[FANS]** and select the working mode of fan: **[Auto]** , **[Off]** , **[Low]** , **[Normal]** or **[High]**