

DMX mode 2: 9 - c h

| CH1 | CH2 | CH3 | CH4 | CH5 | CH6 | CH7 | | CH8 | | CH9 | |
|--------|-----|-----|-----|-----|-----|-----------|---------|-------------|------|---------|--|
| DIMMER | R | G | B | W | A | Program | | SPEED | | Strobe | |
| | | | | | | CH2—CH6 | 0 | | | | |
| | | | | | | Pr.01 | janv-22 | OFF | 0-12 | | |
| | | | | | | | | | RGB | 13-25 | |
| | | | | | | | | | R | 26-38 | |
| | | | | | | | | | G | 39-51 | |
| | | | | | | | | | B | 52-64 | |
| | | | | | | | | | W | 65-77 | |
| | | | | | | | | | A | 78-90 | |
| | | | | | | | | | RG | 91-103 | |
| | | | | | | | | | RG | 104-116 | |
| | | | | | | | | | RB | 117-129 | |
| | | | | | | | | | RB | 130-142 | |
| | | | | | | | | | GB | 143-155 | |
| | | | | | | | | | RW | 156-168 | |
| | | | | | | | | | GW | 169-181 | |
| | | | | | | | | | BW | 182-194 | |
| | | | | | | | | | RA | 195-207 | |
| | | | | | | | | | GA | 208-220 | |
| | | | | | | | BA | 221-233 | | | |
| | | | | | | | WA | 234-246 | | | |
| | | | | | | | RGBWA | 247-255 | | | |
| | | | | | | Pr.02 | 23-45 | 0-255 SPEED | | | |
| | | | | | | Pr.03 | 46-68 | | | | |
| | | | | | | Pr.04 | 69-91 | | | | |
| | | | | | | Pr.05 | 92-114 | | | | |
| | | | | | | Pr.06 | 115-137 | | | | |
| | | | | | | Pr.07 | 138-160 | | | | |
| | | | | | | Pr.08 | 161-183 | | | | |
| | | | | | | Pr.09 | 184-206 | | | | |
| | | | | | | Pr.10 | 207-229 | | | | |
| | | | | | | Pr.11 | 230-252 | | | | |
| | | | | | | SoundMode | 253-255 | Sensitivity | | | |

0-255

0-255

0-255

0-255

0-255

0-255

0-255